




Instructions for Installing Fix-It Latch Kits



#115490, 115500, 115510

#111680, 111690, 111700

OUTSWING

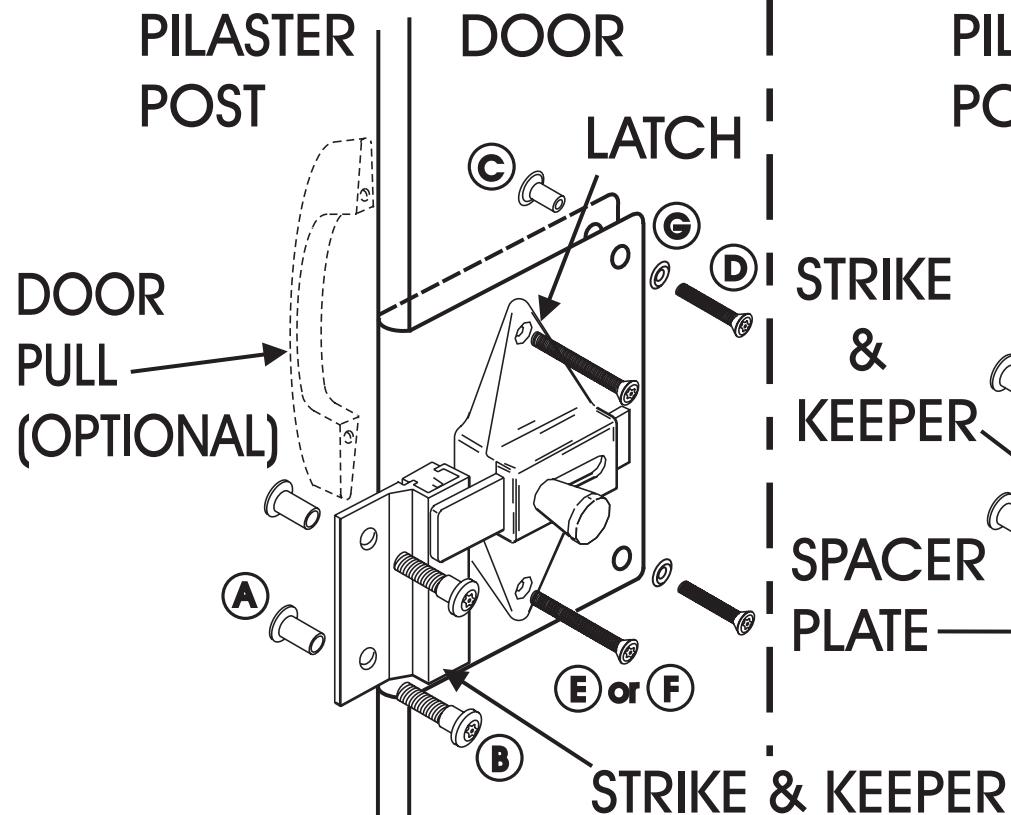

INSWING

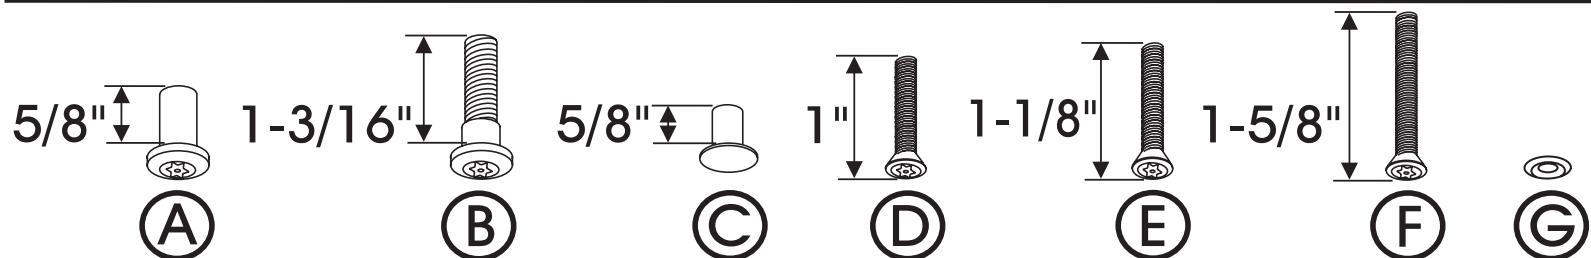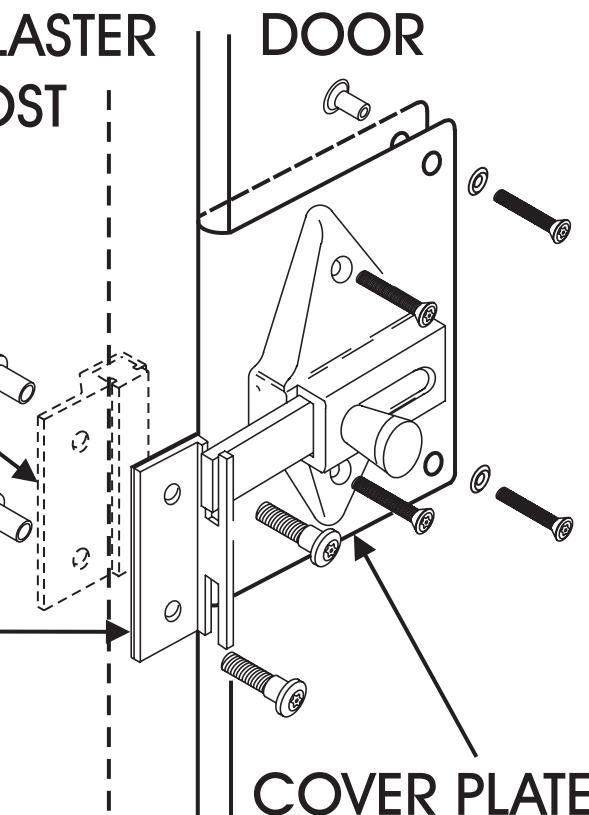

1) USE COVER PLATE AS TEMPLATE FOR HOLES.

* **MAKE SURE PLATE IS FLAT AGAINST DOOR EDGE.** *

2) DRILL HOLES THROUGH USING 1/4" DIA. DRILL.

* **MUST DRILL NEW HOLES - DO NOT USE ANY EXISTING HOLES.** *

3) MOUNT COVER PLATE AND LATCH WITH DESIGNATED FASTENERS.

* **FOR "OUTSWING" USE SHORTER BAR ON LATCH THAT FACES THE EDGE OF THE DOOR.** *

* **FOR "INSWING" USE LONGER BAR ON LATCH THAT FACES THE EDGE OF THE DOOR.** *

4) POSITION STRIKE & KEEPER AS SHOWN.

* **MAKE SURE THAT BAR ON LATCH ENGAGES WITH STRIKE & KEEPER.** *

5) REPEAT STEP #2 USING REMAINING FASTENERS.



* 1 0 2 1 2 5 *